




MBc4000/1700W Graphics Instruction

This will allow you to install graphic files on your ATM. Please read the instructions carefully. It is necessary that you have basic computer skills and are familiar with creating bitmaps to execute this procedure. Issues related to your computer or graphic software program should be directed to the appropriate manufacturers help desk.

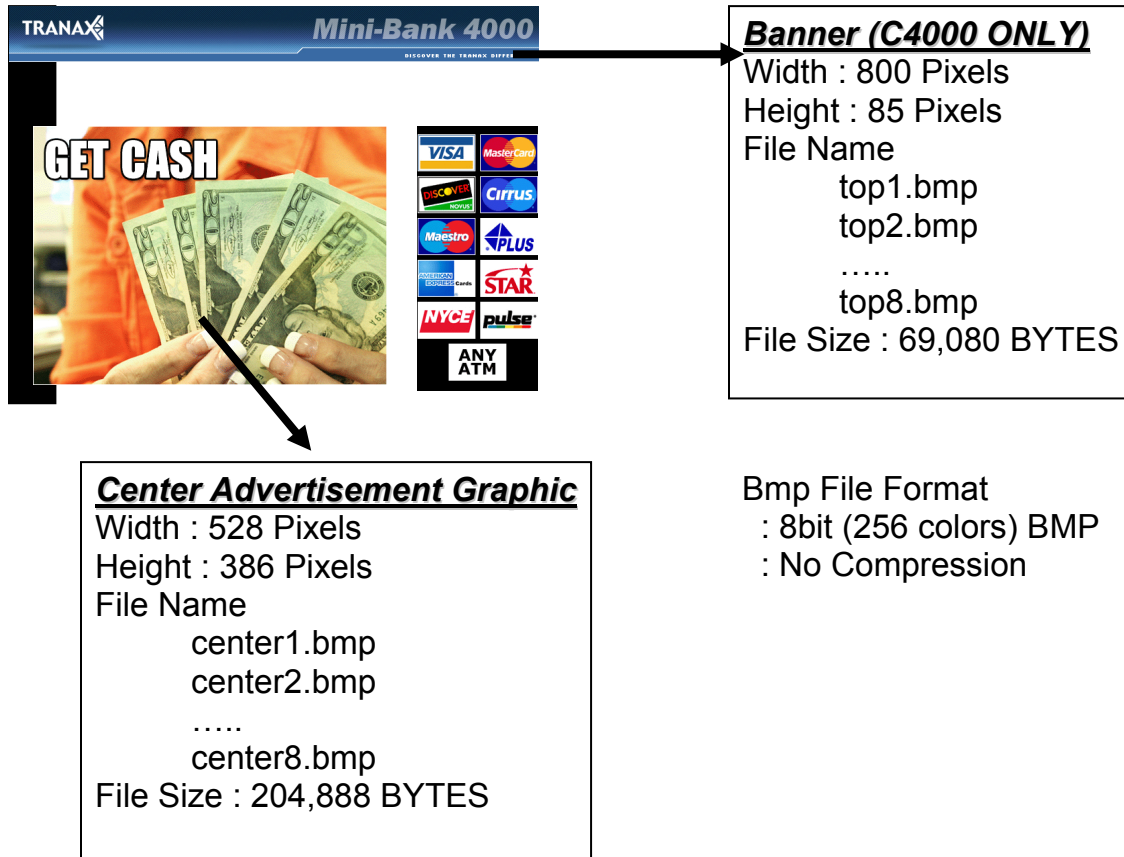

You can have up to 8 banners and 8 center graphic files and must be named as followed:

Banner: top1.bmp, top2.bmp, and so on up to top8.bmp

Center: center1.bmp, center2.bmp, and so on up to center8.bmp

**** DO NOT use more than 256 colors as it will take up more memory on the machine which may cause the machine to freeze due to insufficient memory.****

*****C4000 Support Banner and Center Graphics, 1700W supports Center only***

Loading Graphics using SD (Secure Digital) card




(Any brand and must be **2GB or less**)

*** additional equipment:** SD card reader

1. Format SD card but select FAT or FAT16 as the File System before you format. (**DO NOT** use FAT32 or NTSF)
2. You will need to create a file called update.acu and save it in the newly formatted SD card.

To create this file:

- a. Open up a notepad document. Type in anything in it and save it as "**update.txt**" in the SD card.
- b. Once it's saved in the card rename the file to "**update.acu**". The

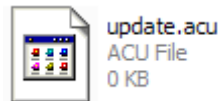

icon should look like this after you rename. If it doesn't you will need to change the viewing option on your PC to view file extensions then rename.

3. In the SD card, create a folder called "Common".
4. Inside the "Common" folder, create another folder called "img4SCR".
5. Inside the img4SCR folder is where you want to copy all your graphic files.
6. Once your graphic files are copied, insert the SD card into the SD card slot on the mainboard located behind the LCD.
7. Reboot the ATM.
8. When the ATM is fully initialized then remove the SD card. Done.

Enabling the Center Graphics:

1. Go into the Operator Menu.
2. Then to Customer Setup > Graphics > **Advertise** EN/Disable and go through each advertisement you want to show up and turn it ON.

Enabling the Banners:

1. Go into the Operator Menu.
2. Then to Customer Setup > Graphics > **Banner** EN/Disable and go through each banner you want to show up and turn it ON.